

Arduino Software & Drivers Installation Guide

For Windows

- **Arduino IDE:** [Download Arduino IDE](#)
- **Driver:** [Download Driver](#)

For Mac

- **Arduino IDE:** [Download Arduino IDE](#)
- **Driver:** [Download Mac Driver](#)

After downloading the driver, please extract the zip file, right-click on `silabser.inf`, and click “install.” (see screenshot below).

